 




OPERATOR'S MANUAL

**Cat. No.
C12-28 DCR**

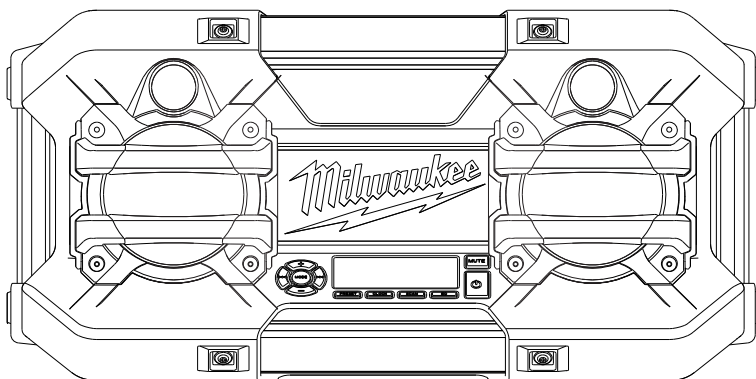

Job Site Radio





TO REDUCE THE RISK OF INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.

IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions.**
- **Keeps these instructions.**
- **Heed all warnings.**
- **Follow all instructions.**
- **Do not use this apparatus near water.** Never immerse the apparatus in liquid or allow a liquid to flow inside the apparatus. Water entering an apparatus will increase the risk for electric shock.
- **Clean only with dry cloth.** Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include: gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Clean dust and debris from vents. Keep the apparatus handle clean, dry and free of oil or grease.
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Protect the power cord from being walked on or pinched** particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Do not abuse the cord. Never use the cord to carry the radio or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock and may create a fire.
- **Use only attachments/accessories specified by the manufacturer.**
- **Unplug this apparatus during lightning storms or when unused for long periods. Remove power supply from outlet when not in use.**
- **Only plug power supply into readily accessible outlet to allow the appliance to be unplugged quickly.**
- **Only operate this apparatus in a well ventilated area.**





SPECIFIC SAFETY RULES

SYMBOLLOGY

	To reduce the risk of injury, user must read operator's manual.
	Volts
~	Alternating Current
A	Amps
Hz	Hertz
	Double Insulated
	Presence of important operating instructions.
	Caution. Risk of electric shock.

Double insulated tools can use

    FUNCTIONAL DESCRIPTION

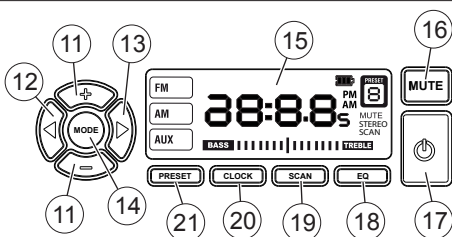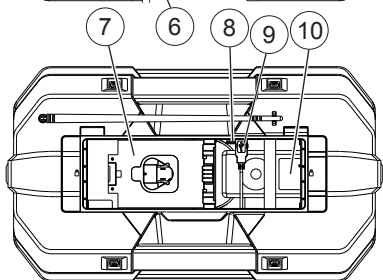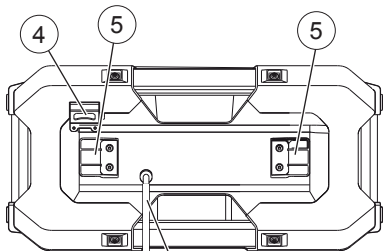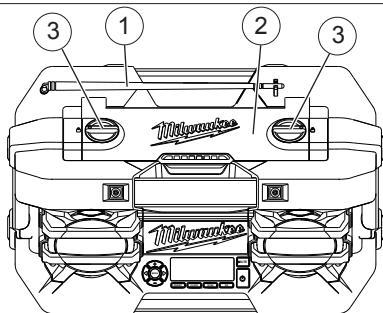

1. Antenna
2. Battery/auxiliary compartment
3. Compartment latches
4. Bottle opener
5. Cord wrap
6. Cord
7. Battery bays
8. Stereo AUX jack
9. USB power outlet
10. AUX storage
11. Volume control
12. Seek/adjust down
13. Seek/adjust up
14. Mode button
15. Display
16. Mute button
17. On/off button
18. EQ button
19. Scan button
20. Clock button
21. Preset button
22. Backup-battery compartment (not shown)

ASSEMBLY

 
⚠ WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing Battery Pack

Turn the compartment latches to unlock and open the battery/auxiliary compartment.

Insert the battery pack by sliding it into the appropriate battery bay.

To **remove** the battery pack, pull the battery pack off of the bay.

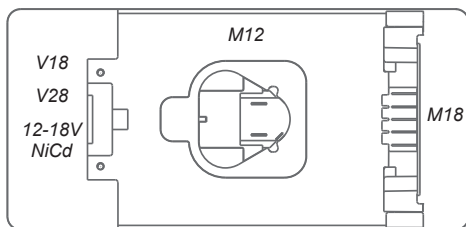

Battery Indicator

When the radio is powered by a battery pack, the battery indicator is displayed.

Battery pack installed

Charge battery pack/Battery pack not installed

Battery Pack Protection

To protect the life of the battery pack, the radio will shut off when the battery's charge becomes too low. If this happens, remove the battery pack and charge it according to the charger's instructions.

Installing an Auxiliary Device

Open the Auxiliary Compartment to connect an MP3 player, CD player, or other audio device using the stereo auxiliary jack. Small devices (less than 63.5mm wide, 127mm high, and 15.88mm thick) can be stored in the compartment during use.

USB Power Outlet

This jack can be used to charge a cell phone, power a CD player or any other device that uses less than 500 mA of DC electrical current. CHARGING WILL ONLY OCCUR WHEN THE RADIO IS PLUGGED INTO AN OUTLET. USB POWER OUTLET WILL NOT CHARGE WHEN THE RADIO IS RUNNING OFF OF A BATTERY PACK.

NOTE: Any device that uses more than 500 mA of DC electrical current will trip a self-resetting function and disable the output.



Output wiring is center positive

⚠ WARNING Batteries may leak chemicals or may explode if used incorrectly. The following care should be taken to prevent such an incident:

 
- Make sure the positive (+) and negative (-) battery terminals are positioned correctly.
- Do not mix new and old batteries together, or mix different types of batteries.
- Do not try to recharge non-rechargeable batteries.

If chemicals from the batteries come in contact with your skin, wash them off immediately with water. If chemicals leak onto the radio, clean the radio completely.

Changing Back-up Batteries

To hold station presets and clock time when the battery pack is removed and the radio is unplugged, 2 AA batteries are required.

1. Remove battery pack and unplug radio.
2. Remove the screw and battery cover.
3. Insert two (2) AA batteries according to matching positive (+) and negative (-) marks.
4. Replace the battery cover and screw.

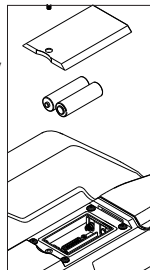

OPERATION

⚠ WARNING Always remove battery pack before changing or removing accessories. Only use accessories specifically recommended for this radio. Others may be hazardous.

⚠ WARNING To reduce the risk of fire or electric shock, do not expose this radio to rain or moisture.

Turning On/Off

Plug the cord into an appropriate AC outlet or install a suitable battery pack.

Press the Power button to turn the radio on and off. The radio station (frequency) is displayed. To display the time, press the CLOCK button.

Volume

Use the **-/+** to increase or decrease the volume. To instantly silent the radio, press the MUTE button. To return to the set volume, press the MUTE button again.

Setting the Clock

1. Press and hold the CLOCK button until the hour begins to flash.
2. Use the ◀▶ buttons to change the hour.
3. Press the CLOCK button again. Use the ◀▶ to change the minutes.
4. Press the CLOCK button again to save.

EQ Adjustment

To manually adjust the Bass/Treble sound, press the EQ button. Set the bass sound using the ◀▶ buttons. Press the EQ button again to set the treble sound, using the ◀▶ buttons.

Selecting Band

Push the MODE button to select AM, FM, or AUX.

Tuning (Seeking and Scanning)

Press and hold the ◀▶ buttons to SEEK through the band. When a station is found, the SEEK will stop. Use the SCAN button to continue through the stations, pausing at each.

PRESET Stations

To **set** the PRESET stations:

1. Tune to desired station.
 2. Press and hold the PRESET button until the PRESET indicator on the display begins to flash.
 3. Use the ◀▶ buttons to select the PRESET location for the station. Ten locations (0-9) are available.
 4. Press the PRESET button to save the location.
- To **tune** to a PRESET station:
Press and release the PRESET button to step through the PRESET stations.

Using the Stereo AUX Jack

1. Open the Battery/Auxiliary Compartment
2. Plug the auxiliary device into the Stereo AUX jack.
3. Use the MODE button to select AUX.
4. Start the auxiliary device.

MAINTENANCE

WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact

WARNING To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to the Techtronic Industries Pty. Ltd. Warranty Terms and Conditions for **MILWAUKEE®** products and accessories which is supplied with the tool or kit. This warranty applies only to product purchased from an authorised **MILWAUKEE®** dealer in Australia or New Zealand.

AUSTRALIA AND NEW ZEALAND

MILWAUKEE® Service

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty®. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised **MILWAUKEE®** dealer or service centre.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Electric Tool Corporation (Australia)

Techtronic Industries (Australia) Pty. Ltd.
Doncaster, Victoria, Australia, 3108

Milwaukee Electric Tool Corporation (New Zealand)

Techtronic Industries (New Zealand) Pty. Ltd.
Mangere, Auckland, New Zealand, 2022

Professionally made in China for Milwaukee Electric Tool Corporation